

Vac Head & Agitator Assembly – LH & RH

Vac Head Pivot Assembly – 294-115-506

NUMBER	DESCRIPTION
1	294-115-505 Vacuum Solenoid Bracket
2	294-002-032 Solenoid, 110V, 3000 Series, Right
2a	294-002-275 Solenoid, 240V, 3000 Series, Right
3	951-148-002 Washer, ¼, Split
4	809-849-085 Screw, Hex, ¼-20 x ½, Gr 8, Black
5	809-849-165 Screw, Hex, ¼-20 x 1, Gr 8, Black
6	02-086 Wire Clamp, ¾"
7	01-052 Nut, Hex, ¼-20
8	294-115-237 Sticker, Crush Hazard
9	294-115-238 Sticker, Hot/Burn Hazard
10	294-115-236 Sticker, Electrical Shock Hazard
11	01-033 Washer, #10, External Tooth, Lock
12	835-540-002 Nut, Hex, 10-32

NUMBER	DESCRIPTION
1	294-115-225 Vac Pivot Block Assembly
2	294-115-504 Vac Pivot Arm Assembly
3	919-010-400 Retaining Ring, E-Style
4	294-115-062 Pivot Pin, 3/8 X 2-1/4, SS
5	294-115-503 Spring
6	01-056 Washer, ¼, Flat
8	01-115 Screw, Hex, ¼-20 X ½
9	835-549-002 Nut, Hex, ¼-20 Jam
10	808-549-160 Screw, Button Head, ¼-20 X 1, Black

