


# SECTION 6.0

## Drawings and Parts Lists

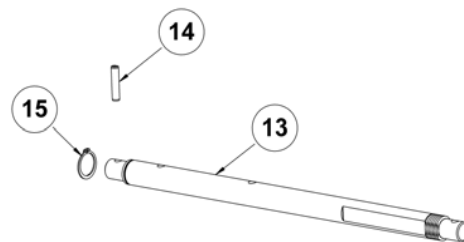

**Main Casting Assembly, 070-007-138**  
**Main Shaft Assembly, 070-006-841**

Item	Part Number	Description
1	070-006-053	Distributor Base Casting
2	070-006-076	Bearing, Open End
3	070-006-075	Bearing, Closed End
4	070-006-074	Thrust Bearing
5	070-006-073	Thrust Washer
6	070-006-064	Bearing Spacer
7	000-024-679	Ball Bearing, .625 x 1.917
8	919-004-200	Retaining Ring, Large
9	919-000-600	Retaining Ring, Med.
10	919-005-300	Retaining Ring, Small
11	070-006-082	Spring Pin
12	000-026-081	Spring Post Sleeve
13	070-006-077	Distributor Drive Shaft
14	913-437-140	Spring Pin, .187 x .875
15	919-005-600	Retaining Ring

