


DISTRIBUTOR DRIVE SHAFT ASSEMBLY

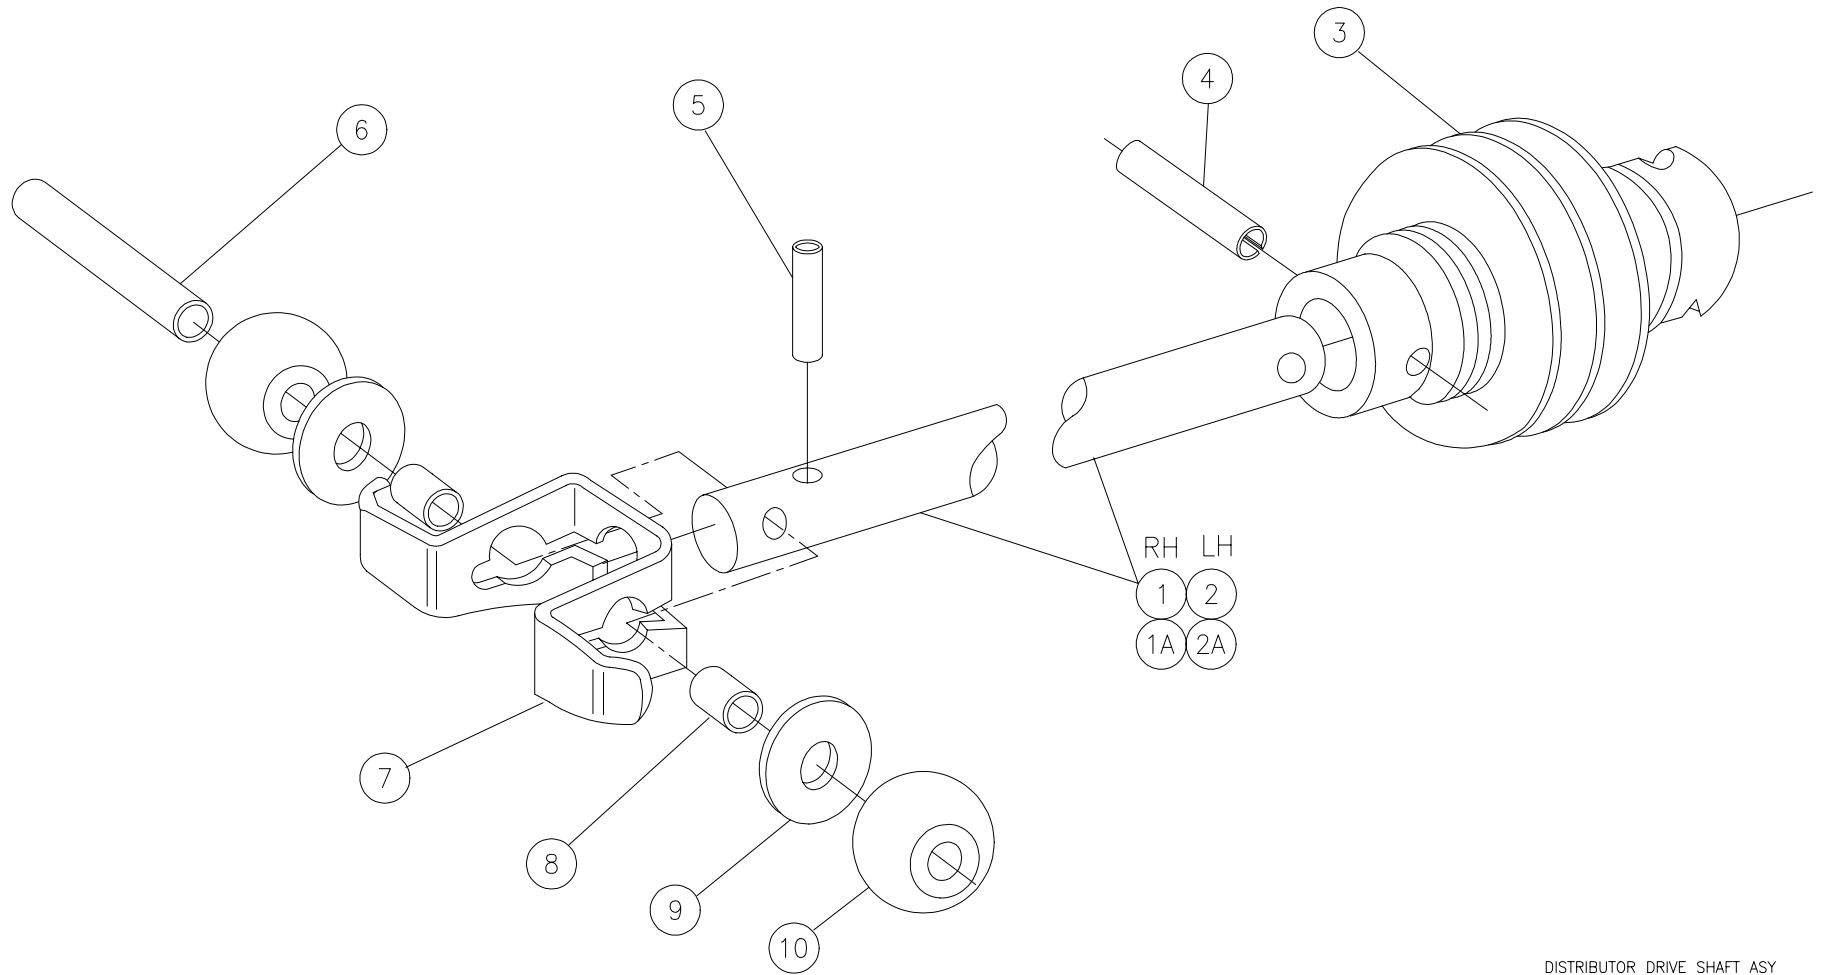

DISTRIBUTOR DRIVE SHAFT ASY



DISTRIBUTOR DRIVE SHAFT ASSEMBLY

ITEM	QTY	PART #	DESCRIPTION
1	1	090-002-018	SHAFT, R.H. MACHINE
1A	1	090-006-102	DISTRIBUTOR DRIVE SHAFT ASSY – R.H. (Includes items 1 & 3 through 10)
2	1	090-002-017	SHAFT L.H. MACHINE
2A	1	090-006-103	DISTRIBUTOR DRIVE SHAFT ASSY – L.H. (Includes items 2 through 10)
3	1	070-007-586	UNIVERSAL JOINT
4	1	913-437-160	SPRING PIN, .187 X 1
5	1	913-423-120	SPRING PIN, .125 X ¾
6	1	908-048-480	DOWEL PIN, 1/4 X 3
7	1	090-002-034	BALL BEARING RETAINER
8	2	722-501-070	SPACER
9	2	000-029-073	WASHER
10	2	090-002-019	BALL

ITEM	QTY	PART #	DESCRIPTION
------	-----	--------	-------------